



## Product Care and Maintenance Guide Shower Screens, Wardrobes, Kitchens, Glass Splashbacks and Mirrors.



Caring for your Premium products with the correct product care and maintenance cleaning procedures will ensure your home looks superb and your Premium products serve you well for many years to come.

### Shower Screen Care

Clean the inside of your shower regularly, at least once a week. Use a cleaner that is designed for use within a shower screen enclosure. Premium recommends that after showering all remaining water should be wiped off the glass, this can be done with a rubber squeegee blade or with a towel. By doing this, soap, shampoo, conditioner, calcium and lime deposits from water do not build up, nor harden and fog the glass making it hard to remove. Over time glass can become permanently stained if regular cleaning and maintenance is not done.

#### HINT:

Use liquid soap when showering, it generally leaves less residue than bar soap resulting in less cleaning & more you time.

The outside of the shower screen can be cleaned with any commercially available glass cleaning product. Never use abrasive cleaners or cloths. Toughened glass will scratch more readily than annealed glass.

### Opening and closing shower screen door

Opening and closing your shower screen door should be done in a gentle manner, avoid slamming or door closing on it's own. Don't subject door and hinged/pivot points beyond normal opening limits, abnormal stress can cause product failure. Avoid any heavy or sharp blows to shower panels, paying particular attention to any exposed edges as these are most vulnerable to damage or breakage.



### Glass Splashbacks and Mirror Cleaning

Only use clean water to clean mirrors, mirror trims and splashbacks. Do not use harsh abrasives as this may damage and scratch surface finishes.

**IMPORTANT:** In no case should a blade, scrapper, steel wool or any other similar tool be applied to a glass surface (shower glass, splashbacks or mirrors).

### 4 Easy Steps - Glass Cleaning Procedure

1. Thoroughly rinse glass to remove loose dirt.
2. Apply mild soap, mild detergent or an approved for glass surfaces commercial cleaning solvent, either by spray bottle, using a clean grit free cloth or soft sponge saturated with the cleaning solution.
3. Glass surface should then be rinsed immediately with generous amounts of clean water to remove the cleaning solution from the glass.
4. Using a squeegee or a clean lint free cloth, remove the water from the glass surface.



### Hardware, Hinges and Aluminum Cleaning

Premium recommends fresh water and a soft cloth for cleaning hardware, hinges and aluminum finishes as many cleaning chemicals, solvents, soaps & detergents are untested on these product surfaces and therefore could result in surface degradation and reduced product life.

✓ Environment Friendly Cleaning.



## premium care

### Product Care and Maintenance Guide

#### Wardrobes & Kitchen Care

Apply mild soap, detergent or commercial solvents to all surfaces using a clean, dry cloth or sponge saturated with the cleaning solution.

Care should be taken to avoid contact with frames, hardware and associated materials when using solvents to ensure no adverse affects.

When using commercial solvents, manufacturers directions and warnings must be adhered to.

All surfaces should be rinsed with clean water after cleaning solutions have been applied.

Dry all surfaces immediately after applying cleaning solutions or water, a squeegee, chamois or clean lint free cloth is suitable.

Under no circumstances should harsh cleaners, alkaline solutions, blades, scrapers, abrasive or similar tools be used on any surfaces.

#### Wardrobe Track and Roller Care

Our Premium system requires no lubrication at all. Periodic wiping of the tracks to remove dust and debris will prolong its life. Failure to ensure tracks are kept clean, free from dust and debris may void product warranty.



#### Melamine Surfaces

Excessive amounts of cleaning fluid or water should not be applied to melamine surfaces. Melamine board will absorb excessive water or cleaning fluid, the edge strip may peel as a result and void the product warranty.



#### Your feedback is important to us

In our continued pursuit for product and customer service excellence we invite you to participate in a short on-line survey. Please scan the QR barcode above to continue to our survey web page.

For more information:

Phone 1300 664 150

Toll free Victoria

[info@premiumoz.com.au](mailto:info@premiumoz.com.au)

[www.premiumoz.com.au](http://www.premiumoz.com.au)



## premium care

### Product Care and Maintenance Guide

